
X-Small	6	7	9
Small	13	14	16
Medium	18	21	24
Large	25	28	31
X-Large	33	35	40

If yes,

- a. Record in Red Book
- b. Return sugar to hopper
- c. Wipe up any excess sugar around the dispenser

If no,

- a. Return sugar to hopper
- b. Go to **Adjust Weights** task
- c. Discard cup

SureShot® Sugar Dispenser: Adjust Weights

Adjust Individual Dispensing Amounts Supplies/Tools Needed



Jewelers Screwdriver



Phillips Screwdriver

1. Remove Back Panel

- a. Remove the 4 Phillips screws



- b. Remove black twist-out screw (only on some models)
- c. Place screws in a non-single-use container

2. Adjust the Screw for the Size Being Calibrated


Use a jewelers screwdriver

10 full revolutions = 0.10 oz



To increase: Turn clockwise

To decrease: Turn counterclockwise

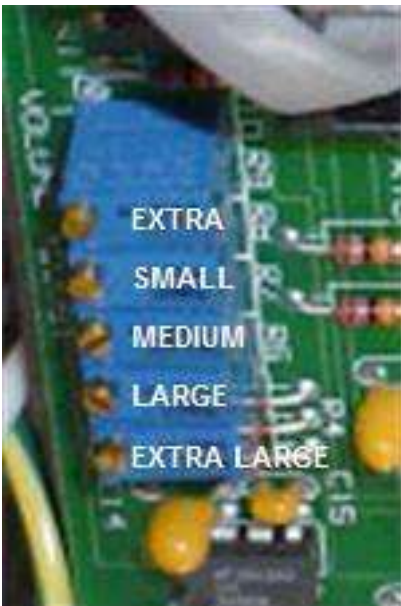

For Newer Models:


Press the PROGRAM button; LED's will light up

- a. Place cup under the dispenser spout, press the size to calibrate on the front of the dispenser



SIZE button being calibrated must be pressed on the front of the machine before making adjustments.

To increase: Press UP button 5–20 times
To decrease: Press DOWN button 5–20 times

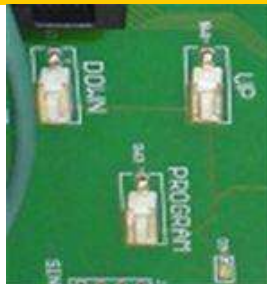

- b. When calibration is complete, press the program button; LED's will turn off

3. Verify New Adjusted Weights

- a. Go to **Check Weights** task
- b. Make adjustments until within specification

4. Is the Adjusted Weight Within Specification?

Sugar Specification (in grams)			
Size	Min.	Target	Max.
X-Small	6	7	9
Small	13	14	16
Medium	18	21	24
Large	25	28	31
X-Large	33	35	40

If yes,

- a. Record in Red Book
- b. Return sugar to hopper
- c. Go to Step 5

If no,

Repeat task beginning with Step 2 until adjusted weight is within specification



If unable to get weights within specification, dispenser should be serviced.

5. Replace Back Panel

Replace screws

6. Replace Drip Tray

SureShot® Sugar Dispenser: Change Sugar Tube Monthly

Change Sugar Tube Supplies and Tools



Sugar Tubes



Conduct Steps 1 through 4 of the **Clean Dispenser Weekly** task before proceeding.

1. Remove and Discard Old Tube

- a. Turn the machine upside down and place on a clean, flat surface
- b. Open the valve door by turning the black screw counter clockwise

